


Cleaning BFN Ionizers

- Integrated Emitter Point Cleaning Brush
- Internal Fan Cleaning



Emitter Point Cleaning Brush

Turn brush clockwise & counter clockwise several times.

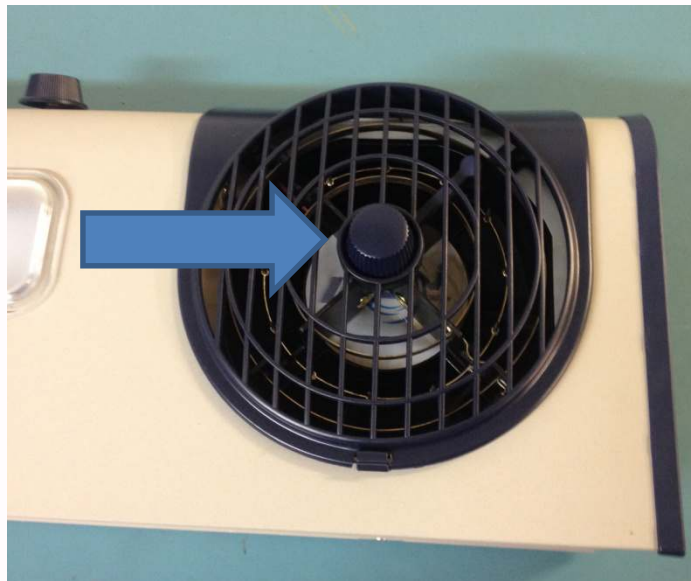

Emitter Point Cleaning Brush

- Turn brush clockwise & counter clockwise several times.
- Do not turn 360 degrees – stopping point is at bottom left



Internal Fan Cleaning

- Remove Fan Guards
- Use clean dry compressed air to remove any dust or particles



Internal Fan Cleaning

- Use Isopropyl Alcohol with clean cloth to clean emitter points and fan assembly





Examples of Unclean Ionizers

Debris Build up on Emitter rings.

Cleaning Brush is tainted with build up.

Consideration

- Make sure ionizer is unplugged before cleaning
- Isopropyl Alcohol can be diluted with distilled water
- Acetone is not necessary
- Emitter points should be completely dry before operation